

Power Pack

USER'S GUIDE

No more worrying about if your battery pack is fully charged. Avoid the pesky problem of your battery pack losing power during game play. With dreamGEAR's Power Pack for the Xbox 360, you can charge your controller and play at the same time!

for
XBOX 360™



dreamGEAR®
www.dreamgear.net

Power Pack Includes:

- 1-Rechargeable Battery
- 1-Charging Cable

Compatible with Xbox 360 wireless controller

TO USE:

Rechargeable Battery

- 1) Make sure your Xbox 360 Rechargeable Battery is fully charged before first use. Whenever battery power is depleted, recharge the battery.
- 2) To detach the Rechargeable Battery from the controller, press the tab on top of the battery pack and pull down.
- 3) To insert the Rechargeable Battery, stick it in to the battery compartment of the controller and push in.

Charging Cable

Insert the Charging Cable to the charge port located on the top of the controller.

NOTE: Connecting the Charging Cable to the controller WITHOUT a rechargeable battery pack, may damage the controller.

- 1) Connect the Charging Cable to a designated controller port.
- 2) Turn on your Xbox 360 console.
- 3) After you have turned on your Xbox 360 console, the light on the Charging Cable will light up red. After your Rechargeable Battery is fully charged, the light will turn green and you will be able to use your controller wirelessly.

Keeping Your Rechargeable Battery Clean

Be sure and keep your Rechargeable Battery clean. Dirt and debris can harm the battery contacts. Use a dry cloth to clean the Rechargeable Battery. DO NOT use water or any chemicals to clean.

Troubleshooting

Problem: Rechargeable Battery charge diminishes too quickly

Solution: After many charge cycles and as the battery pack ages, the amount of play time will decrease. If the play time starts getting shorter or if the Rechargeable Battery does not charge anymore, replace with a new battery pack.

Problem: Charge time is too slow

Solution: When charging and playing at the same time, the Rechargeable Battery takes longer to charge. Certain games require vibration, this will also increase charge time.

NOTE: When the Rechargeable Battery is depleted, it may take up to 20 minutes to charge to power a controller.

Problem: The charge light doesn't glow

Solution: 1) Make sure the Rechargeable Battery is completely locked into the battery compartment. 2) Detach and re-attach a few times. 3) Check the contacts to see if they have been damaged.

dreamGEAR®
www.dreamgear.net

**FOR TECHNICAL SUPPORT
PLEASE CONTACT: 1-877-999-DREAM
or support@dreamgear.net**