

Quad Dock Pro

USER'S GUIDE



CONTENTS:

- Quad Dock Pro
- 110/240V AC Adapter
- User's Guide
- Warranty Card

GETTING STARTED:

1. Remove all contents from the packaging.
2. Plug the included AC Adapter into the DC input located on the back of the Quad Dock Pro.
3. Insert your rechargeable battery pack on to the Quad Dock Pro and make contact with the charging terminal. The LED in front will illuminate **RED** indicating that the charge cycle has begun. When the charge cycle is complete, the LED will illuminate **GREEN**.
4. To release the rechargeable battery pack, hold down the button on the battery pack and lift up to remove.

NOTE: The Quad Dock Pro is compatible with all Xbox 360 compatible battery packs. Additional rechargeable battery packs can be purchased separately.

TROUBLESHOOTING:

Question: The LED lights are not lighting up.

Answer:

- Make sure that the AC Adapter is plugged in properly and securely into the Quad Dock Pro.

Question: My rechargeable battery pack is not charging.

Answer:

- Make sure the rechargeable battery pack is inserted into the Quad Dock Pro securely.
- Make sure that the rechargeable battery pack is making proper contact with the charging terminals on the Quad Dock Pro. Make sure the Quad Dock Pro is free from debris.
- Make sure that the contacts on the rechargeable battery pack and the Quad Dock Pro are not damaged.

NOTE: Be sure and keep your rechargeable battery packs and the Quad Dock Pro clean. Dirt and debris harm the battery contacts. Use a dry cloth to clean. DO NOT use water or any chemicals to clean.