

Power Brick

USER'S GUIDE

Extra power means longer gameplay! dreamGEAR's Power Brick rechargeable battery for the Xbox 360 offers convenient and economical power for your Xbox 360 wireless controller. Now you don't have to worry about if your battery pack is losing power. If you notice your battery pack losing power, simply take it out and slide in a fully charged dreamGEAR Power Brick!

for
XBOX 360™



dreamGEAR®
www.dreamgear.net

Keeping Your Battery Clean

Be sure and keep your *Power Brick Rechargeable Battery* clean. Dirt and debris may harm the battery contacts. Use a dry cloth to clean the battery. DO NOT use water or any chemicals to clean.

Inserting Your Battery Pack

Press tab on top of the Rechargeable Battery and pull down to detach from it the controller. Insert the battery pack into the battery compartment located on the back of the controller and lock into place.

NOTE: Avoid pinching your fingers by pushing only on the flat surface of the Power Brick Rechargeable Battery.

It is very important to charge your Rechargeable Battery before the first use and whenever it is depleted. When the battery is unused for a long time, the Rechargeable Battery may lose its charge. Do not be alarmed if the battery becomes warm during charging cycle or use. This does not indicate a problem. It is normal.

It may take up to 20 minutes to have enough power for the Rechargeable Battery to be used. After long periods of non-use, it may take 3 to 5 charging cycles for the Rechargeable Battery to be at its full capacity. Replace the Rechargeable Battery when play time becomes shortened or when it can no longer be charged.

Troubleshooting

Power: Rechargeable Battery charge diminishes too quickly

Solution: After many charge cycles and as the Rechargeable Battery ages, the amount of play time will decrease. If the play time starts getting shorter or if the battery does not charge anymore, replace with a new battery.

Problem: Charge time is too slow

Solution: When charging and playing at the same time, the rechargeable battery takes longer to charge. Certain games require vibration, this will also increase charge time.

Problem: The charge light doesn't glow

Solution: 1) Make sure the Rechargeable Battery is completely locked into the battery compartment. 2) Detach and re-attach a few times. 3) Check the contacts to see if they have been damaged

Problem: The battery isn't charging.

Solution: 1) Make sure the battery is properly and securely inserted into the charger. 2) Make sure the contacts on the battery aren't damaged or compromised.

dreamGEAR®
www.dreamgear.net

**FOR TECHNICAL SUPPORT
PLEASE CONTACT: 1-877-999-DREAM
or support@dreamgear.net**