

i.Sound™ 2X POWER

Instruction Manual



The i.Sound™ 2X Power provides high quality sound in a compact, foldable design. The i.Sound™ 2X Power is fully compatible with iPod® video/photo, iPod® nano, iPod® mini, iPod® shuffle, MP3, CD players and any other audio device with a standard headphone output. Take your portable audio devices wherever you go. i.Sound™ 2X Power can be powered using 4 "AAA" batteries or by using the included AC adapter. i.Sound™ 2X Power brings BIG sound in a compact, travel friendly design.

Box Contents

- i.Sound™ 2X Power Speaker
- iPod® nano Bracket
- iPod® Bracket
- AC Adapter

iPod® nano
bracket attached



iPod® 3g,4g and 5th
generation iPod®
bracket attached



Speaker Set-up

1. When using batteries, open the battery compartment located on the back of the speaker. Insert 4 "AAA" batteries.
2. The i.Sound™ 2X Power can also be powered by using the included AC adapter. Plug the AC adapter into the i.Sound™ 2X Power Speaker and then into a wall outlet.
3. When using the iSound™ 2X Power with your iPod® simply attach the included stand to the front of the speakers. The stand will snap into the 2 holes on the front of the speaker.
 - ~ use the iPod® nano stand for iPod® nano
 - ~ use the other iPod® stand for all other iPods®
4. Move the power switch located on the top of the speaker to the "on" position. The LED will confirm the speaker is powered on.
5. Unwrap the speaker cable from the i.Sound™ 2X Power and plug it into the headphone output of your audio device of choice. When using the iPod® nano bracket, simply plug the i.Sound 2Xs' audio cable into the side of the nano bracket.
6. Always power the speaker "off" when not in use.
7. The i.Sound™ 2X Power speaker system is also compatible with non-iPod® audio devices. To use the i.Sound™ 2X Power with any other portable audio device, simply plug the i.Sound™ 2Xs' audio cable into your audio player of choice.

Troubleshooting:

- Problem:** No sound is coming from the i.Sound™ 2X Power speaker?
Solution: Make sure the speaker and the audio device is powered on.
Solution: Confirm the volume on the audio device is turned up.
Solution: If using batteries, confirm the batteries are not drained.
Solution: If using AC adapter, confirm it is properly connected.
Problem: Sound quality is poor or maximum volume is not satisfactory.
Solution: If using batteries, confirm the batteries are not drained. When the batteries start to lose power you will experience loss of sound quality. Replace batteries.