

# iSound: The New Sound™

## MY MESSENGER BOARD RECORD IT • WRITE IT • POST IT



# User's Guide

## A. Introduction

Thank you for selecting the i.Sound My Messenger Board. The main features include a built in microphone with a speaker for recording and single button navigation for easy playback of audio messages. The unit comes with LED indicator lights that notify you when there is a recorded message. Recording time is up to 30 seconds. It also has a foam padded bulletin board for notes, pictures, announcements, etc... Other features include magnetized erasable white board and magnetized dry erase marker with eraser, key hooks and easy wall mount. The unit can be powered by four "AAA" batteries (not included) or by 5v AC Adapter (not included). The unit is constructed to provide years of reliable, trouble-free service. Please read the entire instruction manual supplied with this product prior to operation. The documentation will assist you in obtaining the best equipment performance. All manuals should be stored for later use.

## B. Cautions and Warnings

### 1. Placement

To prevent fire or electric shock, do not expose this appliance to rain or moisture. To prevent it from falling, do not place the set on an unstable cart, stand, tripod, bracket or table. Keep the unit away from heat sources and excessive dust.

### 2. Installation

Ensure that My Messenger Board is used in accordance with the instructions and illustrations provided in this manual.

### 3. Objects and Liquid

Do not push objects of any kind into the unit through openings; do not spill or spray liquid of any kind on or in the system (this may result in a fire or electric shock).

### 4. Disassembly

Do not attempt to disassemble the board. There is a risk of electric shock. Contact i.Sound customer service personnel if your system is malfunctioning or in need of repair.

### 5. Cleaning the Unit

When cleaning, make sure the system is powered off and unplugged from the power source. Do not use liquid cleaners or aerosol cleaners. Use a cloth lightly dampened with water for cleaning the exterior of the system only.

## C. Contents

- My Messenger Board
- 1 Magnetized Dry Erase Marker with Eraser
- 2 Wall Mounting Screws

## D. Set Up and Installation

**BATTERIES:** Remove the battery door by pushing down and pulling the locking tab. Install the four “AAA” batteries according to the diagram inside the battery compartment. (Batteries not included). Replace battery door to the back of the unit.


**MOUNTING:** Locate a stud or crossbeam in your wall and screw in the two mounting screws approximately 11 inches apart from each other. Carefully hang your My Messenger Board. It is recommended that you do not hang your board over any breakable materials like glass or electronics.

## E. Using the My Messenger Board

**POWER:** Slide the power button located on the right side of the unit to the “ON” position to power on the unit.

**RECORDING MESSAGES:** To record a new message, hold the “RECORD/PLAY” button down for five (5) seconds until the red LED light begins flashing. After a few seconds the red LED light should stop flashing and remain solid red. This indicates that you are ready to record your message. You may leave up to a thirty (30) second message. Once you are done recording your message, press the “RECORD/PLAY” button once again to save and store your new message. You should then see a blue flashing LED that indicates that you have a “NEW” message. Once a message has been played for the first time, the blue LED will remain illuminated indicating that you have a saved message.

**PLAYING RECORDED MESSAGES:** To playback a new or saved recorded message, press the “RECORD/PLAY” button. To stop the playback, press the “RECORD/PLAY” button once and the message playback will stop. Once a message is stopped it automatically rewinds back to the beginning, so that the next time you play it, it will start from the beginning.

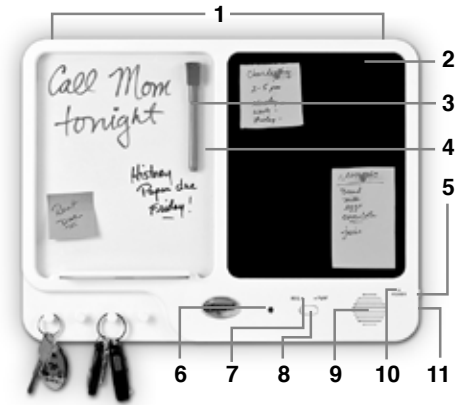

## Features

1. Easy wall mount
2. Bulletin Board
3. Magnetized dry erase marker/eraser
4. Magnetized erasable white board
5. On/Off switch
6. Built in microphone
7. LED message indicator
8. Record/Play button
9. Built in speaker
10. LED power indicator
11. A/C input (optional, adapter not included)

**FOR TECHNICAL SUPPORT  
PLEASE CONTACT: 1-877-999-DREAM  
or email us at [support@dreamgear.net](mailto:support@dreamgear.net)**