

Play-a-long Guitar Kids™

USER'S GUIDE

Fret Buttons:

Press fret buttons to form notes, sustains and chords.

Strum Bar:

- * Just like strumming strings on a real guitar, press the Strum Bar to activate notes.
- * In selection menu, press this bar to select.
- * Each time you press the fret buttons, simultaneously press the Strum Bar to make different notes.

Whammy Bar:

Use the Whammy Bar to create custom and unique sound effects.

The external audio input allows you to connect any portable audio device with a 3.5mm headphone jack.

Blue Fret Button:

In the melody and background selection menu, press this button to start and confirm. After a melody is over, press this button to return to the menu.

Red Fret Button:

In melody and background selection menu, press this button to start and confirm. After one melody is over, press this button to restart the melody.

INSTALLING THE BATTERIES

The Play-a-long Guitar Kids requires 4 AA alkaline batteries. To insert the batteries, unscrew the battery door and install the batteries with the positive (+) and negative (-) ends as shown in the battery compartment. Replace the battery door and screw.


Battery Cautions:

IMPORTANT: Only parents should replace the batteries.

- * Do not use rechargeable batteries.
- * Do not attempt to recharge non-rechargeable batteries.
- * Insert batteries as marked and always follow the toy and battery manufacturer's instructions.
- * Use only the same or equivalent type of battery as recommended.
- * Do not short-circuit the supply terminals.
- * Do not mix old and new batteries.
- * Do not mix different types of batteries, such as alkaline, standard (carbon-zinc) and rechargeable.
- * Always remove the exhausted or dead batteries from the product.
- * Remove batteries from product before extended storage.

PLAY-A-LONG GUITAR KIDS SET-UP

1. Plug the audio cable (red end) into your video display's audio input (red input) and plug the Video cable (yellow cable) into your video display's video input (yellow input).
2. Confirm your video display is set to the proper video input (for example, if you plug the guitar into your video display's input 1, switch your video display to input 1).
3. Power "ON" your video display and Play-a-long Guitar Kids controller.

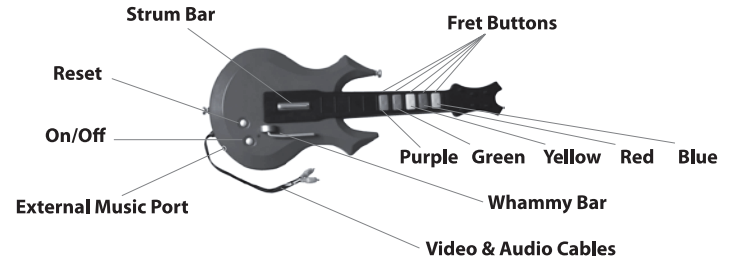

DESCRIPTION

Guitar Rock Game:

Enter selection menu to select a song to play to the melody. There are 10 built-in tracks.

Songs with 3 modes:

Easy: In this mode, you need to use the first 3 fret buttons to play the melody.

Normal: In this mode, use the first 4 fret buttons (sometimes 3) to play the melody.

Hard: In this mode, all 5 fret buttons are used.

Characters: There are 3 characters for the player to choose from.

Background: Choose from any of 10 backgrounds.

Life: There is a life bar at the bottom for the game screen to show the current life of the player. If the player hits the correct fret buttons to match the melody, life will increase. If the player does not match the melody, life will decrease. Once life is empty, game will be over.

Score: If player hits the correct fret buttons 10 times in a row, the score will double. The maximum score is 9 times the original score.

Game Rules:

- * All melodies are marked with stars. The number of stars for each song indicates the difficulty.
- * Use the Play-a-long Guitar Kids controller to play the scrolling notes by holding the corresponding fret button on the guitar neck and simultaneously pressing the Strum Bar.

Game Result: After one melody is over, there will be a game result shown on the screen. The score, notes hit, percentage of hits and game passed or game failed will be displayed.

Song List:

Detroit Rock City
Rock and Roll all Nite
Shout it out Loud
Rock and Roll Hoochie Koo
Sweet Home Alabama
Funk No. 49
Juke Box Hero
Magic Carpet Ride
Heart and Soul
We Got the Beat

External Music:

You can play unlimited amounts of music by connecting a portable audio device to the Play-a-long Guitar Kids. When external music is being played, scrolling notes will drop down at random. Hit the corresponding fret buttons to match them.

Guitar Jam:

Use the Play-a-long Guitar Kids controller to create your own music. Just hit the fret buttons to compose your favorite melodies.

How to Play:

(buttons for each note should be pressed simultaneously)

Bass 1 Press Strum Bar down
Bass 2 Press blue button and Strum Bar down
Bass 3 Press blue button, red button and Strum Bar down
Bass 4 Press red button and Strum Bar down
Bass 5 Press red button, yellow button and Strum Bar down
Bass 6 Press yellow button and Strum Bar down
Bass 7 Press yellow button, green button and Strum Bar down

Alt 1 Press green button and Strum Bar down
Alt 2 Press green button, purple button and Strum Bar down
Alt 3 Press purple button and Strum Bar down
Alt 4 Press Strum Bar up
Alt 5 Press blue button and Strum Bar up
Alt 6 Press blue button, red button, and Strum Bar up
Alt 7 Press red button and Strum Bar up

Treble 1 Press red button, yellow button and Strum Bar up
Treble 2 Press yellow button and Strum Bar up
Treble 3 Press yellow button, green button, and Strum Bar up
Treble 4 Press green button and Strum Bar up
Treble 5 Press green button and purple button with Strum Bar up
Treble 6 Press purple button and Strum Bar up

Troubleshooting

The TV will not show any image of the video game:

- * Make sure the TV is turned ON and set to the proper VIDEO input.
- * Make sure the two video cables are connected to the proper color-coded plugs on TV.
- * Check to make sure the guitar is switched to the ON position.
- * Replace the batteries in the guitar.

The TV displays a poor or grainy image:

- * Check all cables and connections between guitar and TV.
- * Replace the batteries.
- * Adjust the TV settings.

I can see the image but there's not sound:

- * Check video cables and connections between guitar and TV.
- * Adjust the volume control on the TV.

The video game stopped playing or froze in the middle of the game:

- * Replace the batteries in the Play-a-long Guitar Kids controller.
- * Move the video game farther away from the television.
- * Press reset button to reset the game.

**FOR TECHNICAL SUPPORT PLEASE CONTACT:
1-877-999-DREAM or e-mail support@dreamgear.net**

dreamGEAR
www.dreamgear.net