



PACKAGE CONTENTS:

- GameStation
- 2 Controllers
- Light Gun Controller
- AC adapter
- User's Guide/Warranty Card
- Registration Card

SETTING UP THE GAMESTATION:

1. Locate the Audio (white) and Video (yellow) inputs on your television.
2. Plug the Video (yellow) cable from the GameStation console into your TV's Video input.
3. Plug the Audio (white) cable from the GameStation into your TV's Audio input.
4. Connect the Video (yellow) and Audio (white) cable to the GameStation.
5. Confirm your video display is set to the proper channel (for example, if you plug the GameStation into your television's Input 1, switch your television to the same Input 1 channel).
6. Connect the AC adapter to the GameStation and then into any standard wall outlet.

PLAYING ON THE GAMESTATION:

1. Press the Power button on the GameStation.
2. Plug 1 or 2 controllers into the GameStation.

NOTE: The second player controller is to be used with 2-player games where both players are playing at the same time only. For all other 2-player games, player 1 and player 2 switch off using the main controller.

3. Once the games menu appears, you can scroll through the menu using the directional pad on the controller.

4. Press the Select or Start button to choose game.

NOTE: Pressing the Start button during gameplay will pause the game, pressing the Start button again will resume gameplay.

5. When playing a game that uses the Light Gun Controller, simply unplug the controller from port 1 and plug in the Light Gun Controller.

TROUBLESHOOTING

Problem: The Console doesn't turn ON.

Solution: Make sure that the AC adapter is plugged in properly and securely into a standard wall outlet. Make sure that the port on the GameStation and the outlet on the wall are free from debris. Make sure that the AC adapter port on the GameStation is not damaged or compromised.

Problem: The games won't show up on my TV screen.

Solution: Make sure that the AV cable is properly and securely plugged into the TV. Make sure that the TV is on the proper channel (the channel should match the setting on where the plugs are plugged into). Make sure that the AV cable is free from debris. Make sure that none of the AV cable contacts on both ends are damaged or compromised.