




dreamGEAR
www.dreamgear.net

Contents

- 1 ShredMaster Guitar Controller
- 1 Guitar Strap

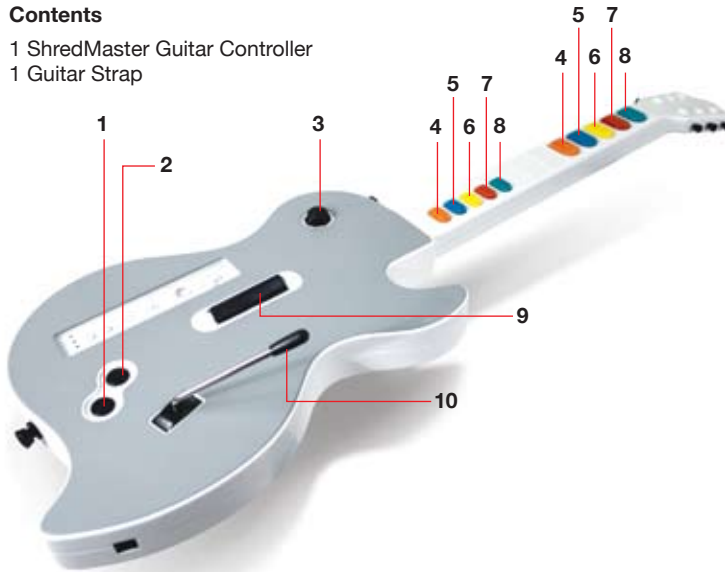

USING THE SHREDMASTER

- 1 - Start Button:** Confirm/Pause
- 2 - Select Button:** Back/Activate star power
- 3 - Analog Stick/D-Pad:** Navigate the menu
- 4 - Orange Fret Button:** Activate the orange note
- 5 - Blue Fret Button:** Activate the blue note
- 6 - Yellow Fret Button:** Activate the yellow note
- 7 - Red Fret Button:** Activate the red note/Cancel
- 8 - Green Fret Button:** Activate the green note/Confirm
- 9 - Strum Bar:** Press the strum bar UP or DOWN to activate the fret button(s) pressed. To navigate thru menu press the strum bar UP or DOWN
- 10 -Whammy Bar:** Push down and up on long notes to bend the pitch and add style and originality to each song

dreamGEAR
www.dreamgear.net

CONNECTING THE SHREDMASTER

1. Power on the Wii Console
2. Sync the Wii Remote to the Wii Console (for more information, please refer to the Wii Instruction Manual)
3. Detach the Wii Remote slot door located on the back of the ShredMaster
4. Connect the Wii Remote to the plug located on the back of the ShredMaster
5. The ShredMaster will automatically power on once the Wii Remote is connected to the plug
6. Insert the Wii Remote into the remote slot located on the back of the ShredMaster and reattach the slot door

TROUBLESHOOTING

Problem: The Wii Remote does not sync to the Wii Console

Solution: 1) Make sure the Wii Console is powered on.
2) Make sure the Wii Remote has power.

- 3) Make sure the sensor bar is plugged in properly and securely.
- 4) Make sure the Wii Remote is synced properly to the Wii Console.

Problem: The Wii Remote does not fit in properly or securely to the Shred-Master

Solution: Make sure there aren't broken parts or anything else hindering proper insertion

Problem: The ShredMaster does not power on/work properly

Solution: 1) Make sure the Wii Remote is synced properly with the Wii Console.
2) Make sure the Wii Remote is plugged in properly and securely to the ShredMaster

For more information on how to use the Wii remote with Guitar Hero games, please refer to the Wii and Guitar Hero Instruction Manuals

**FOR TECHNICAL SUPPORT
PLEASE CONTACT: 1-877-999-DREAM
or support@dreamgear.net**