



**dreamGEAR**  
www.dreamgear.net

#### Package Contents:

Jeli Sleeve  
Travel Bag  
Fitness Mat  
Textured Socks  
Rechargeable Battery Pack/Charging Cable

#### USING THE JELI SLEEVE:

##### To Put On:

1. Lay the Wii Balance Board face up on a flat surface.
2. Lift one side of the Wii Balance Board
3. Slide the Jeli Sleeve over the lifted side of the Wii Balance Board making sure the open slots on the Jeli Sleeve go evenly over the “legs” located on the bottom of the Wii Balance Board. Make sure the silicone pegs on the Jeli Sleeve go flush into the slots located next to the “legs” on the Wii Balance Board. Follow the same procedure on the other side.

##### To Take Off:

1. Lay the Wii Balance Board face up on a flat surface.
2. Lift one side of the Wii Balance Board
3. From the bottom, lift the Jeli Sleeve from one end removing all of the silicone pegs from the slots. Lift the Jeli Sleeve over the Wii Board legs and slide it up and over the side of the Wii Balance Board
4. Follow the same procedure on the other sides and remove the Jeli Sleeve from the Wii Balance Board.

#### USING THE TRAVEL BAG:

1. Lay the Travel Bag on a flat surface.
2. Unzip the Travel Bag by pulling the zippers to the far end of the bag until the zippers cannot go any further and the bag is completely open and unzipped.
3. Lift up on end of the Travel Bag and slide in the Wii Balance Board.
4. Close the Travel Bag and zip it back to where the bag is completely closed.

#### USING THE FITNESS MAT:

1. Unroll the Fitness Mat and lay on a flat surface.
2. Start workout.

*Note: You can also use the Fitness Mat for your other exercises, such as Pilates and Yoga.*

#### USING THE RECHARGEABLE BATTERY PACK:

1. Plug the USB Charging Cable into an available USB port on the Wii or any other device that has a powered USB port.
2. Connect the USB Charging Cable to the Rechargeable Battery Pack.
3. The green LED indicates that the battery is charging.
4. The red LED light indicates that the charge cycle is complete and that the battery is ready for use.
5. Remove the battery door from the Wii Balance Board and insert the Rechargeable Battery Pack with the “teeth” end going in first. Lock into place with the hinges snapping, indicating proper insertion.
6. To remove, press the release tab and lift the Rechargeable Battery Pack up and out.

*Note: The Charging Cable can remain inserted in the Rechargeable Battery Pack so you can charge the Rechargeable Battery Pack while in gameplay.*

#### TROUBLESHOOTING:

**Problem:** The zipper on the Travel Bag does not work properly.

**Solution:** Make sure that there aren't any broken parts or debris hindering proper movement on the zipper.

**Problem:** The Neo Fit does not go on properly to the Wii Balance Board.

**Solution:** Make sure the elastic straps aren't torn. Make sure there aren't any broken parts or anything else hindering proper insertion on the Wii Balance Board.

**Problem:** The Rechargeable Battery Pack is not charging.

**Solution:** Make sure ALL the USB cables are properly inserted to the USB ports. Make sure that there is power going to the USB ports.

**Problem:** The Rechargeable Battery Pack does not go into the Wii Balance Board properly.

**Solution:** Make sure there aren't broken parts or anything hindering proper insertion.

**dreamGEAR**  
www.dreamgear.net

**FOR TECHNICAL SUPPORT  
PLEASE CONTACT: 1-877-999-DREAM  
or support@dreamgear.net**