



iSound: The New Sound[®]
www.isound.net

20001 S. Western Avenue, Torrance CA 90501
tel: 310.222.5522 :: fax: 310.222.5577

20 in 1 Mega Deal PLUS

Everything you need for your Wii

ITEM No. - DGWII-1277

UPC - 8 45620 01277 0

COLOR - Assorted



1 Component/
S-Video/AV Multi-Cable



2 Racing Wheels



1 Sharp Shot Blaster



2 Rechargeable
Battery Packs

1 Dual Charging Dock



2 Game Grips & 2 Wrist Straps



1 Remote &
1 Nunchuk Jeli Grip



2 Remote Savers



1 Golf Club, 1 Tennis Racket, 1 Baseball Bat, 1 Pool Stick & 1 Remote Cradle

* Wii Remote, Wii Nunchuk & Wii MotionPLUS not included

PRODUCT FEATURES

- 2X Racing Wheels - work with Wii MotionPLUS
- 1 Sharp Shot Blaster - works with Wii MotionPLUS
- 1 Dual Charging Dock
- 1 Tennis Racket
- 1 Golf Club
- 1 Baseball Bat
- 1 Pool Cue
- 1 Wii Remote Cradle - works with Wii MotionPLUS
- 1 Wii Remote Jeli Grip - works with Wii MotionPLUS
- 1 Wii Nunchuk™ Jeli Grip
- 2 Game Grips
- 2 Wrist Straps
- 2 Remote Savers
- 2 Rechargeable Battery Packs
- 1 Component/S-Video/AV Multi-Cable

PRODUCT PACKAGING



TRANSLATIONS

	SPANISH	FRENCH
PACKAGING	YES	YES
USER'S GUIDE	YES	YES

SHIPPING INFORMATION

	QUANTITY	WIDTH (in.)	HEIGHT (in.)	DEPTH (in.)	CUBE (ft³)	WEIGHT (lbs.)	UPC NUMBER
SINGLE	1	9	17.5	5	0.46	3.20	8 45620 01277 0
MASTER	4	10	18	20.75	2.16	14.40	8 45620 01277 0
INNER	N/A	N/A	N/A	N/A	N/A	N/A	

User's Guide

Mega Deal PLUS
USER'S GUIDE



dreamGEAR™
www.dreamgear.net

PACKAGE CONTENTS:

- Wii Remote Cradle
- Baseball Bat extension
- Tennis Racket extension
- Golf Club extension
- Pool Cue extension
- Sharp Shot Light Gun
- 2 Racing Wheels
- Dual Charging Dock
- 2 Rechargeable Battery Packs
- DC 5V Charge Cable
- Component/S-Video/AV Multi-Cable
- 1 Set of Jeli Grips
- 2 Game Grips
- 2 Wii Remote Savers
- 2 Wrist Straps
- User's Guide/Warranty Card
- Registration Card

NOTE: The Wii Remote Cradle, Sharp Shot Light Gun, Racing Wheel and the Dual Charging Dock are not compatible with the Wii Remote Jacket. Be sure to remove the Wii Remote Jacket before attempting to install. Please refer to the Wii Remote's User's Guide on how to install and uninstall the Wii Remote Jacket.

NOTE: The Wii Remote Cradle, Sharp Shot Light Gun and Racing Wheel feature an infrared pass-through which allows the user to make on-screen selections without having to remove the Wii Remote.

WII REMOTE CRADLE AND SPORTS EXTENSIONS

How to Use the Wii Remote Cradle and Sports Extensions:

1. Place the Wii Remote into the Wii Remote Cradle.

NOTE: The Wii Remote Cradle can be used with the Wii Remote with or without Wii MotionPLUS.

2. Depending on which game you are playing, choose the appropriate sports extension.
3. With the Wii Remote inserted into the Wii Remote Cradle, attach the Baseball Bat, Tennis Racket, Golf Club or Pool Cue extension to the top of the Wii Remote Cradle by twisting clockwise until the extension is completely installed.

SHARP SHOT LIGHT GUN

Installing the Wii Remote without Wii MotionPLUS:

1. Open both latches located at the top of the Sharp Shot Light Gun.
2. Insert the Wii Remote into the Sharp Shot Light Gun by sliding it into the Wii Remote cradle of the Sharp Shot Light Gun (directional pad end first with the buttons facing upward).
3. Slide the directional pad end of the Wii Remote towards the front of the Sharp Shot Light Gun until it stops.
4. Close the latch nearest to the "A" button. If you are playing a game that does not require the Wii Nunchuk™, close the latch located near the back of the Sharp Shot Light Gun and you are ready to play. If your game requires the use of the Wii Nunchuk, continue to step 5.
5. Through the back opening of the Sharp Shot Light Gun, slip the connector plug of the Wii Nunchuk under the back latch on the Sharp Shot Light Gun and connect the Wii Nunchuk to the Wii Remote. Make sure that the connector cover of the Wii Remote has been removed before inserting the connector plug of the Wii Nunchuk into the External Extension Connector of the Wii Remote.
6. Close the back latch.

Installing the Wii Remote with Wii MotionPLUS:

1. Open both latches located at the top of the Sharp Shot Light Gun.
2. Insert the Wii Remote into the Sharp Shot Light Gun by sliding it into the Wii Remote cradle of the Sharp Shot Light Gun (directional pad end first with the buttons facing upward).
3. Slide the directional pad end of the Wii Remote towards the front of the Sharp Shot Light Gun until it stops.
4. Close both latches on the top of the Sharp Shot Light Gun. If you are playing a game that does not require the Wii Nunchuk, you are ready to play. If your game requires the use of the Wii Nunchuk, continue to step 5.
5. Make sure the connector cover of the Wii MotionPLUS has been removed and insert the connector plug of the Wii Nunchuk into the External Extension Connector of the Wii MotionPLUS.

NOTE: The top trigger of the Sharp Shot Light Gun activates the A button, the bottom trigger activates the B button. Please refer to your game's User's Guide for button configuration.

How to Remove the Wii Remote:

1. If the Wii Nunchuk is attached to the Wii Remote or the Wii MotionPLUS, remove the Wii Nunchuk first before trying to remove the Wii Remote from the Sharp Shot Light Gun.

NOTE: Please refer to the Wii Remote's User's Guide for Wii Nunchuk removal instructions.
2. Open both latches located at the top of the Sharp Shot Light Gun and lift the Wii Remote up from the back and side the Wii Remote back until it is completely out of the Sharp Shot Light Gun.

RACING WHEEL

How to Install the Wii Remote into the Racing Wheel with Wii MotionPLUS:

1. Open the latch located on the front of the Racing Wheel.
2. Insert the wrist strap attached to the Wii Remote through the hole on the Racing Wheel and pull through.
3. Place the Wii Remote with Wii MotionPLUS into the wheel so that the directional button is located on the left side of the wheel.
4. Close the latch to secure the Wii Remote into the Racing Wheel.

NOTE: Use the pass-through port on the Racing Wheel to navigate through any menus.

How to Install the Wii Remote into the Racing Wheel without Wii MotionPLUS:

1. Open the latch located on the front of the Racing Wheel.
2. Insert the wrist strap attached to the Wii Remote through the hole on the Racing Wheel and pull through.
3. Place the Wii Remote into the wheel so that the directional button is located on the left side of the wheel.
4. Close the latch to secure the Wii Remote into the Racing Wheel.

NOTE: Make sure that the Wii Remote is pushed all the way to the left side of the Racing Wheel.

Close the latch to secure the Wii Remote into the Racing Wheel.

NOTE: Use the pass-through port on the Racing Wheel to navigate through any menus.

How to Remove the Wii Remote:

1. Open the latch located on the front of the Racing Wheel.
2. Gently press outwards on the Wii Remote from the hold on the back of the Racing Wheel.

DUAL CHARGING DOCK

How to Set Up the Dual Charging Dock and Charge the Rechargeable Batteries:

1. Remove the battery lid on the Wii Remote and remove any batteries that may be installed.
2. Replace the original battery lid with one of the included Rechargeable Battery Packs.

NOTE: If using 2 Wii Remotes, please follow steps 1 and 2 for the other Wii Remote.

3. Plug the DC plug end of the included DC 5V USB Cable into the back of the Dual Charging Dock.
4. Plug the USB plug end of the cable into any powered USB port.

NOTE: The Wii must be powered ON if using the USB port on the back of the Wii.

5. With the Dual Charging Dock properly connected to a powered USB port, place one or two Wii Remotes onto the Dual Charging Dock. Make sure that the contacts points on the battery are lined up correctly with the contact points on the Dual Charging Dock.
6. Charging will begin automatically. The Orange LED indicates that the battery is charging. The Blue LED indicates that the battery is fully charged.

COMPONENT/S-VIDEO/AV MULTI-CABLE

Using the Component Cables:

1. Plug one end of the S-Video Cable into the back of the Wii.
2. To hook up the video, plug the green, blue and red plugs (the red plug nearest to the blue and green plugs) into the corresponding ports on the television.
3. To hook up the audio, plug the white and red (the red plug nearest to the white plug) into the corresponding audio ports on the television.

Using the S-Video Cable:

1. Plug one end of the S-Video Cable into the back of the Wii.
2. Plug the white, red and yellow plugs into the corresponding ports on the television for both audio and video.
3. Plug the S-Video cable into the S-Video port on the television.

Using the AV Cable:

1. Plug one end of the S-Video Cable into the back of the Wii.
2. Plug the white, red and yellow plugs into the corresponding ports on the television for both audio and video.

Game Grips

1. Remove the battery cover from the back of the Wii Remotes.
2. Replace the battery cover with the Game Grips for enhanced control during gameplay.

dreamGEAR™
www.dreamgear.net

FOR TECHNICAL SUPPORT
PLEASE CONTACT: 1-877-999-DREAM
or support@dreamgear.net