


Package Contents:

- Power Fit
- Remote & Nunchuck Holsters
- Neo Fit
- User's Guide/Warranty Card
- Registration Card

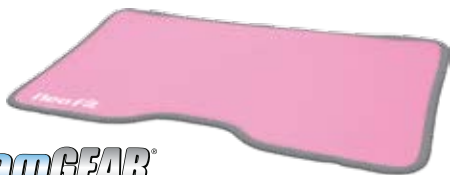

dreamGEAR
www.dreamgear.net

USING THE REMOTE & NUNCHUCK HOLSTERS:

1. During exercises or breaks, simply slide your Wii Remote and Nunchuck into their holsters to keep them conveniently within arm's reach.
2. When in use, simply slide the Remote or Nunchuck out of the Holster.

USING THE NEO FIT:

To Put On:

1. Lift up the Wii Balance Board and put it on its short side with the top of the Wii Balance Board facing towards you.
2. Slide the first elastic strap of the Neo Fit over the legs of the Wii Balance Board. Do the same with the other 3 elastic straps until the Neo Fit is completely on the Wii Balance Board.

To Take Off:

1. To release the Neo Fit, lift up the Wii Balance Board and put it on its short side with the top of the Wii Balance Board facing towards you.
2. Slide the first elastic up and over the legs of the Wii Balance Board. Do the same with the other 3 elastic straps until the Neo Fit is completely off the Wii Balance Board.

USING THE POWER FIT:

1. Plug the USB power cable into an available USB port on your Wii console or any other device that has a powered USB port.
2. Remove the door from the Wii Balance Board and insert the Power Fit with the "teeth" end going in first. Confirm the Power Fit is securely attached to the Wii Balance Board.
3. To remove, press the release tab and lift the Power Fit up and out of the Wii Balance Board.