




USER'S GUIDE



PACKAGE CONTENTS:

1. AudioBox
2. Shower hook
2. Instruction manual

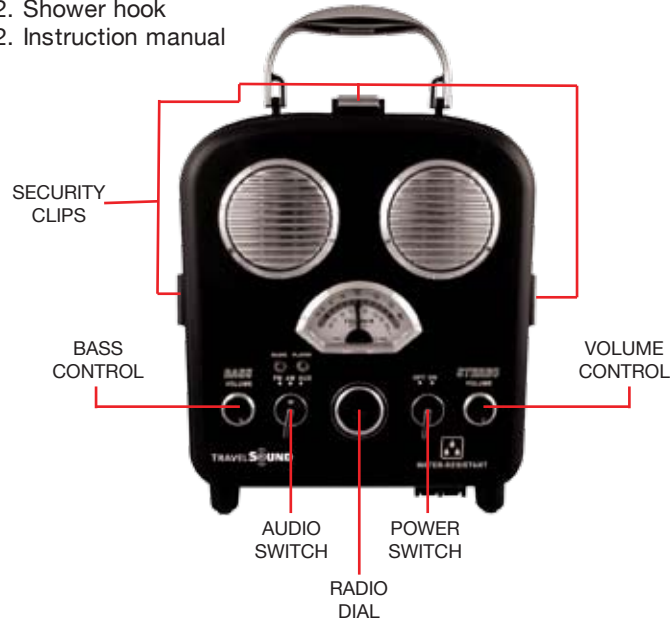

Audio cable pass-thru



External use of audio cable



Audio Strap

AUDIOBOX SET-UP:

1. Open the AudioBox casing by releasing the 3 security clips. Open the battery compartment and install 4 "AA" batteries. Make sure to follow the battery installation diagram as seen on the battery lid. Note: You can also power the AudioBox by purchasing a 6volt AC adapter from any electronics store. The AC adapter input is located on top of the battery compartment.
2. The AudioBox is compatible with all portable audio devices that feature a 3.5mm headphone jack.
3. Most portable audio devices will fit inside the AudioBox's casing, when using the AudioBox with iPods, use the included audio strap to securely hold the iPod in place. The AudioBox also includes a rubber protective sleeve for securely strapping a 1st or 2nd generation iPod nano. Most other audio devices can be held in by the audio strap and larger audio devices do not require the audio strap.
4. For using the AudioBox with audio players too large to fit inside the AudioBox's casing run the 3.5mm audio cable thru the audio cable pass-thru located on the back of the AudioBox. Always make sure to cover the audio cable pass-thru when not in use by plugging the hole with the built-in pass-thru plug.
5. When carrying the AudioBox always make sure the security clips are snapped closed.

USING THE AUDIOBOX IN THE SHOWER:

1. The AudioBox is water resistant and can be hung from any shower head by using the included shower hook. Never hang the AudioBox where water will directly hit the AudioBox. **Note: when using the Audio Box in the shower, make sure the audio cable pass-thru has been plugged. NEVER USE AN AC ADAPTER WHEN USING THE AUDIO BOX IN OR NEAR WATER.**

NOTE: THE AUDIOBOX IS ONLY WATER RESISTANT, NEVER SUBMERGE THE AUDIOBOX IN WATER, IT IS ONLY DESIGNED TO WITHSTAND VERY LIGHT MIST OF WATER.

FOR TECHNICAL SUPPORT
PLEASE CONTACT: 1-877-999-DREAM
or visit us on the web @ www.isound.net

FOR TECHNICAL SUPPORT
PLEASE CONTACT: 1-877-999-DREAM
or visit us on the web @ www.isound.net